



Innovation. Application. Dedication.

# INSTRUCTIONS

## ISC85X Intelligent Controller FOOTBALL

FOOTBALL			ISC85X	
HOME SCORE	GUEST SCORE	+ 1	GAME TIME	INT. MODE
HOME YD.	GUEST T.O.L.	+ 2	BALL ON	QUARTER
PLAY TIMER SET		+ 3	DOWN	POSS.
PLAY TIMER RESET	NEW GAME	+ 6	YARDS TO GO	

1. **START/STOP** the clock:
  - Flip switch ON/OFF (rocker switch on the right side of the unit).
2. To set **TIME**:
  - **Press GAME TIME.**
  - Enter minutes on the numeric keypad. **Press ENTER.**
  - Enter seconds on the numeric keypad. **Press ENTER.**
  - Enter hundredths of seconds on the numeric keypad. **Press ENTER.**

**NOTE:** Time switch must be in STOP position to be able to set the TIME. In Volleyball if no time is entered the time display on the scoreboard will be blank.
3. To set **PERIOD/QUARTER**:
  - **Press PERIOD.**
  - Enter Period on numeric keypad. **Press ENTER.**
4. To set **TIME OUT/INTERMISSION** timer:
  - **Press INT MODE.**
  - Enter minutes on the numeric keypad. **Press ENTER.**
  - Enter seconds on the numeric keypad. **Press ENTER.**
  - To exit this mode, **Press INT MODE** again.

5. To set **SCORES**:
  - **Press HOME** or **GUEST SCORE.**
  - Enter score on numeric keypad. **Press ENTER.**
6. To **INCREMENT SCORES**:
  - **Press HOME** or **GUEST SCORE.**
  - Then **Press: +1, +2, +3, or +6.**
7. To set **T.O.L.:**
  - **Press HOME T.O.L.** or **GUEST T.O.L.**
  - **Enter T.O.L.** value on the numeric keypad. **Press Enter.**
8. To toggle **POSSESSION** between **HOME/GUEST**:
  - **Press POSS.**
9. To set **BALL ON, DOWN** or **YARDS TO GO**:
  - Press the appropriate button.
  - Enter the value on the numeric keypad and **Press Enter.**

**NOTE:** When entering these values, if you start with BALL ON, once you press ENTER the keypad will automatically changes to DOWN. Press ENTER again to change to YARDS TO GO.
10. To **CLEAR** any of the values:
  - Press the desired key, then **Press CLEAR.**
11. To set **PLAY TIMER (IF ENABLED)**:
  - Ensure the start/stop switch is in **STOP.**
  - **Press PLAY TIMER SET.**
  - Enter "shot clock" length on the numeric keypad. **Press ENTER.**
12. To **RE-SET PLAY TIMER (IF ENABLED)**:
  - **Press PLAY TIMER RESET.**
13. To change to a **NEW GAME**:
  - Hold down the **NEW GAME** button for 3-4 seconds until an introductory screen appears.
  - All values are reset at this point.

